
Parking Distance Control , (7X2)


From September 2014



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.







ST2 Fuse Panel 2 ST3 Fuse Panel 3

SB9 Fuse 9 (On Fuse Panel B)

SB10 Fuse 10 (On Fuse Panel B) SB11 Fuse 11 (On Fuse Panel B)

SB14 Fuse 14 (On Fuse Panel B)

T17c 17-Pin Connector


T17d 17-Pin Connector

T17e 17-Pin Connector

44) Ground Connection on A-Pillar, Lower Left


369 Ground Connection 4 (in Main Wiring Harness)

Refer to Applicable Wiring Diagram for Fuse Positions

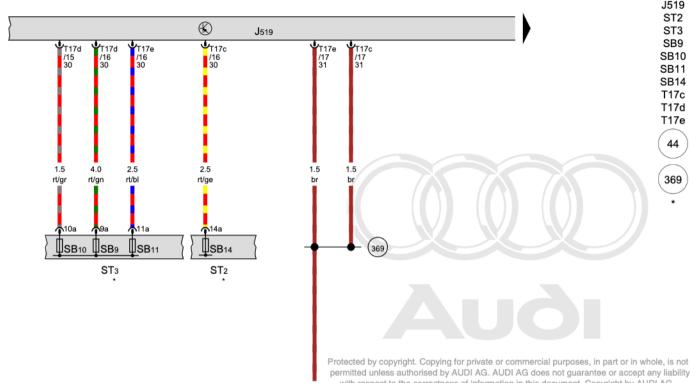

with respect to the correctness of information in this document. Copyright by AUDI AG. = white = black = red = red = brown = green = blue = grey = lilac (44) = lilac = yellow 11 12 13 = orange or 4G.I-104020420 rs = pink

Wiring Diagram

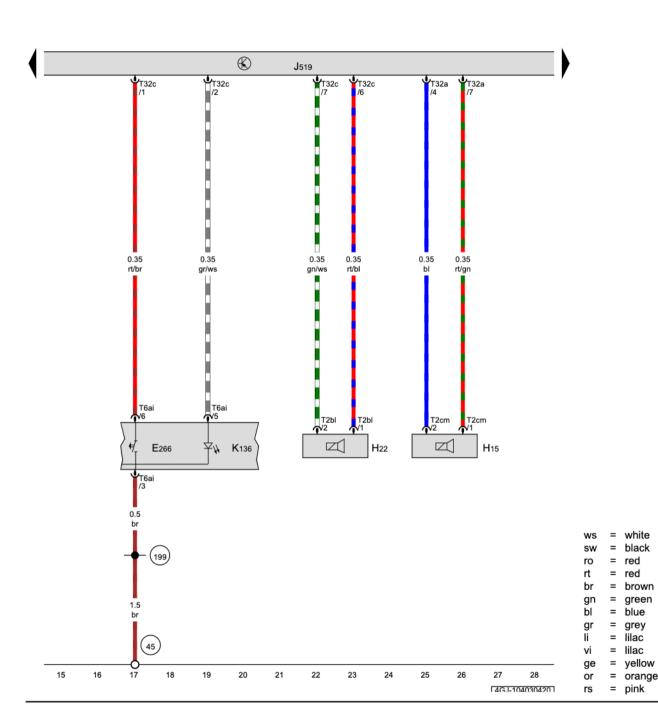

Parking Aid Button, Rear Parking Aid Warning Buzzer, Front Parking Aid Warning Buzzer, Vehicle Electrical System Control Module, Parking Aid Indicator Lamp

E266 Parking Aid Button

H15 Rear Parking Aid Warning Buzzer

H22 Front Parking Aid Warning Buzzer

J519 Vehicle Electrical System Control Module

K136 Parking Aid Indicator Lamp

T2bl 2-Pin Connector

T2cm 2-Pin Connector

T6ai 6-Pin Connector

T32a 32-Pin Connector

T32c 32-Pin Connector


45 Ground Connection Behind Instrument Panel, Center

Ground Connection 3 (in Instrument Panel Wiring Harness)

Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Wiring Diagram

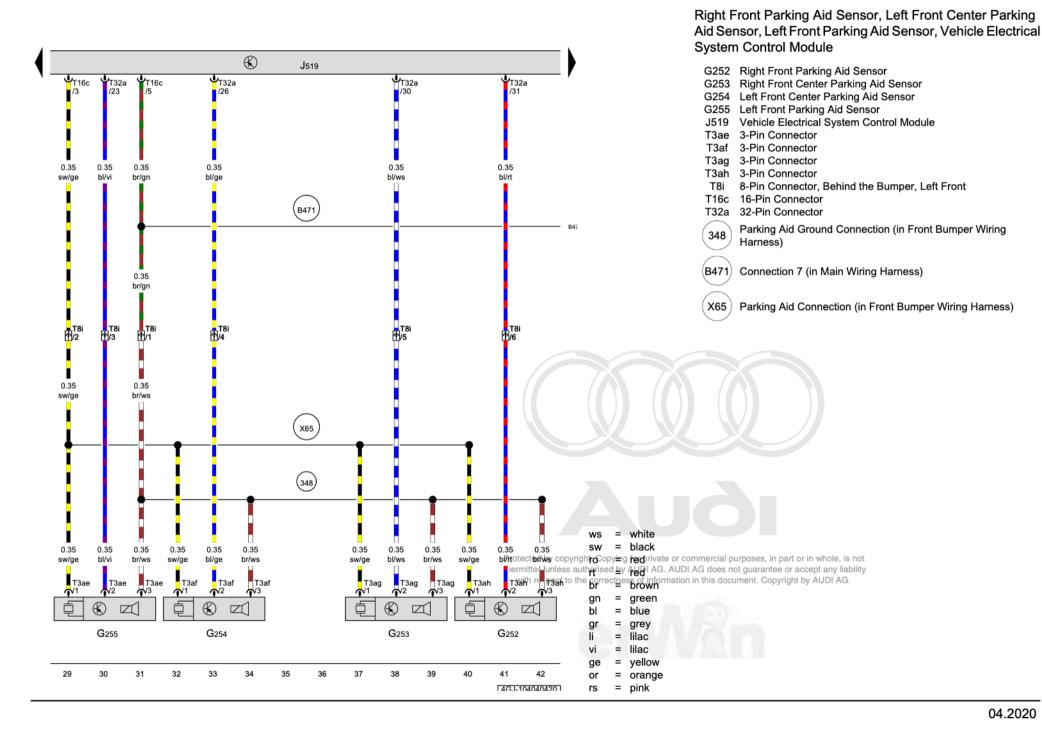

Wiring Diagram

whiteblack

= red = red

bl

or

rs

= brown = green

= blue = grey

= lilac = lilac = yellow

= orange

= pink

(K) J519 U_{T32a} **∳**Т32а **₽**T32a **₽**T32a **₽**T32a 0.35 0.35 0.35 0.35 0.35 0.35 gn/vi br/rt rt/gn br/gn gn/ge gn/ws **具**T16v T16v T16v ∱/4 T16v 小2 T16v **.**T16∨ 0.35 0.35 rt/gn br/gn X68 (352) 0.35 0.35 0.35 0.35 0.35 0.35 0.35 0.35 0.35 0.35 0.35 rt/gn br rt/gn br/rt gn/vi rt/gn gn/ge rt/gn gn/ws br T3al V1 T3am T3am T3ao T3al T3al T3am T3an T3an **(K) (K) ® (K)** M \square \square G203 G204 G205 G206 51 52 53 4G.I-104050420

Left Rear Center Parking Aid Sensor, Right Rear Parking Aid Sensor, Vehicle Electrical System Control Module

```
G203 Left Rear Parking Aid Sensor
G204 Left Rear Center Parking Aid Sensor
G205 Right Rear Center Parking Aid Sensor
G206 Right Rear Parking Aid Sensor
J519 Vehicle Electrical System Control Module
T3al 3-Pin Connector
T3am 3-Pin Connector
T3ao 3-Pin Connector
T16v 16-Pin Connector, Behind the Right Rear Bumper, Brown
T32a 32-Pin Connector
T3ao 32-Pin Connector
T46v 16-Pin Connector
T3ao 32-Pin Connector
T3ao 32-Pin Connector
T3ao 32-Pin Connector
```

Connection 7 (in Main Wiring Harness)

X68 Parking Aid Connection (in Rear Bumper Wiring Harness)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.